

Application Note 2019

# Ultrasonic Sensor Disks

For Automotive and Industrial Applications

Ultrasonic sensor disks emit and detect inaudible soundwaves. A typical application example is distance measurement using the pulse-echo method.


## Working principle

By measuring the time of flight  $t$  of an acoustic wave packet and at the known speed of sound in the respective medium  $c_{\text{medium}}$ , the travelled distance  $x$  can be calculated as  $x = t/2 \cdot c_{\text{medium}}$ . This method can be used for obstacle detection or distance measurement, where the wave packet is reflected from an obstacle. The method is also applicable for level measurement where the wave packet is

reflected from the surface of a liquid.

By measuring the time of flight across a fixed distance, the speed of sound and related quantities like the density or composition of a medium can be determined.

Ultrasound can be used in air, gas, liquids and solids. With appropriate housing, ultrasonic sensors can be very robust towards dirt, temperature, chemicals and harsh environments. They offer a precise, robust, and contactless option for object detection as well as measurements of level, flow, or distance.




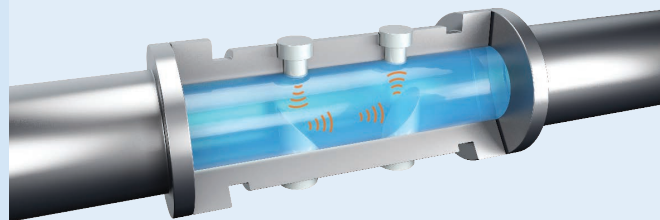


# Ultrasonic Sensor Disks

## The piezoelectric effect


Ultrasonic sensor disks are based on the piezoelectric effect. Applying pressure to a piezoelectric material leads to the generation of a voltage across the electrode surfaces (*direct piezoelectric effect*). Conversely, when applying an electric field across a piezoelectric material, it will respond with expansion or contraction (*indirect piezoelectric effect*). Making use of both effects enables the use of just a single ultrasonic sensor disk for both emission and detection of soundwaves.

The piezoelectric effect was first observed in 1880 by the brothers Jacques and Pierre Curie in various crystalline materials such as quartz. However, a much stronger piezoelectric effect can be achieved in poly-crystalline ceramic materials such as lead zirconate-titanate (PZT), which is used for TDK's ultrasonic sensor disks. These materials are *ferroelectric* below their characteristic *Curie temperature*  $T_c$ . Permanent piezoelectric behavior can be induced in these materials by exposing them to a strong electric field (*poling*) during production.

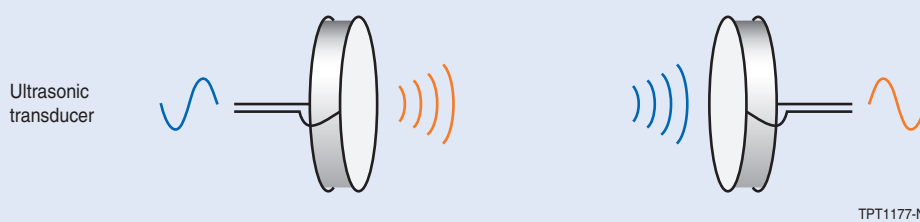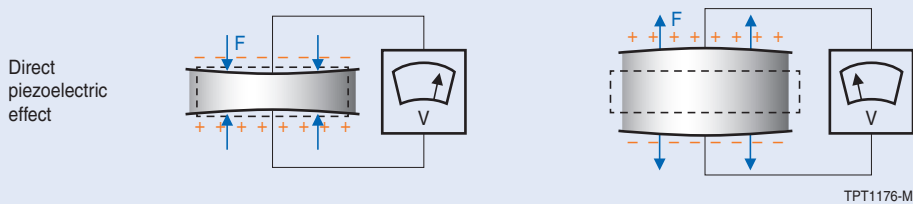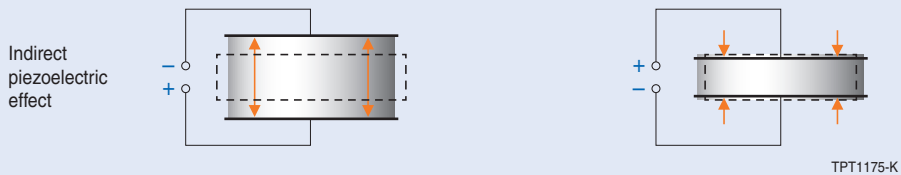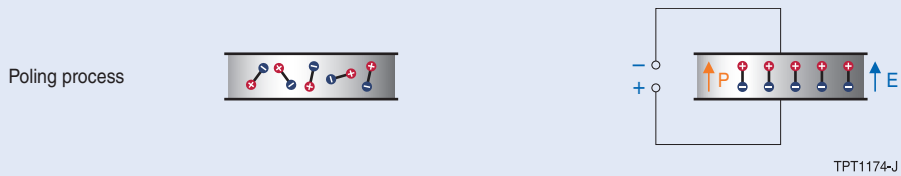

# Ultrasonic Sensor Disks

## The piezoelectric effect – PZT crystal structure

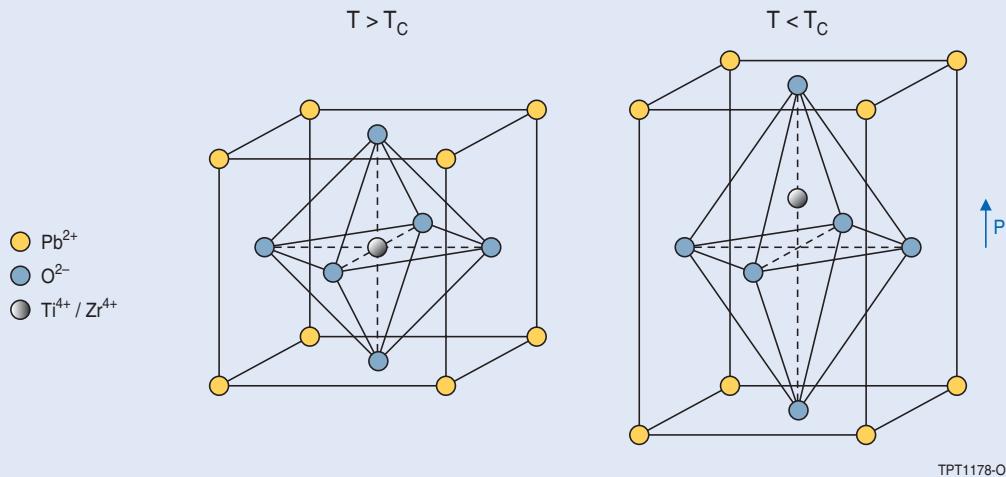


## Dynamic behavior of free disks

### Resonance modes

When applying an AC signal to the electrodes of a piezoelectric element, the material will respond with periodic expansion and contraction. Due to the material's intrinsic stiffness and mass, mechanical resonances occur at certain frequencies. When the element is operated in resonance, the amplitude of the oscillation – and therefore the sound pressure level and the sensitivity – can be heavily enhanced, an effect that is utilized in ultrasonic transducers.

These resonances can be categorized into different oscillation modes. TDK ultrasonic sensor disks are designed for either radial oscillation or thickness oscillation. The radial mode corresponds to a periodic oscillation of the radial dimension of the disk, while the thickness mode corresponds to a periodic oscillation of the disk's thickness.


For each basic mode, higher order oscillation modes are possible, but in typical applications only the lowest oscillation mode is used. Any disk will exhibit both radial and thickness mode resonances, but the design is optimized for only one mode.

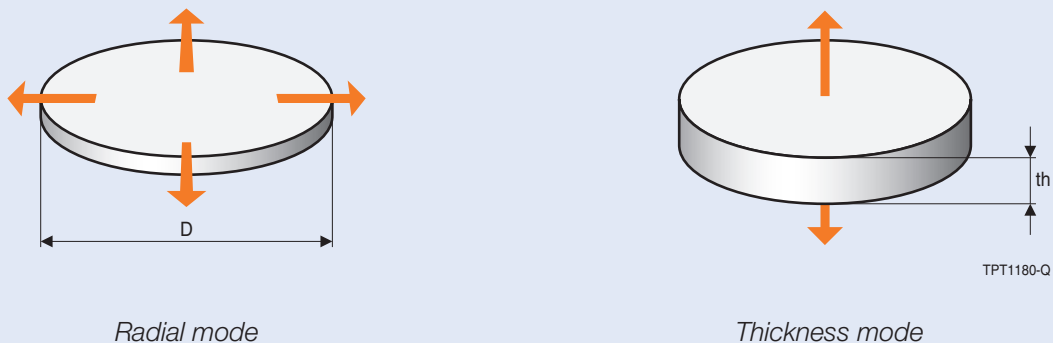

# Ultrasonic Sensor Disks


## Equivalent electrical circuit

Even though the resonance of the ultrasonic transducer is a mechanical effect, it can be modeled electrically using an equivalent oscillator circuit for frequencies in the vicinity of the resonance.

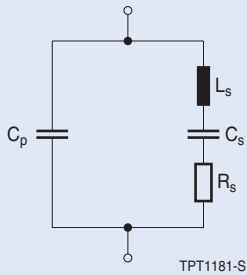

- $C_p$  represents the electrical capacitance between the electrodes
- $C_s$ ,  $L_s$ ,  $R_s$  represent mechanical properties of the ceramic

The relation between electrical impedance and excitation frequency around the resonance can be described by the following diagram.

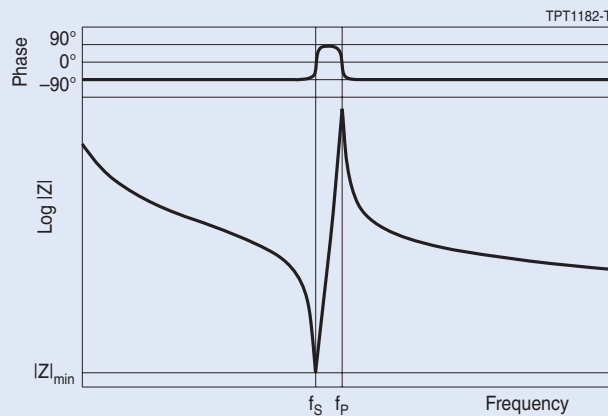

The resonance has two distinct frequencies, the series resonance  $f_s$  with minimal impedance  $Z_{\min}$  and the *parallel resonance*  $f_p$ . Further parameters can be calculated from the electrical impedance measurement.

For example, the coupling factor  $k_{\text{eff}}$ , a measure for the conversion rate of mechanical and electrical energy, can be calculated as

$$k_{\text{eff}}^2 = \frac{f_p^2 - f_s^2}{f_p^2}$$

The calculation of the coupling factor depends on the boundary conditions of the measurement. Slightly different coupling factors  $k_t$  and  $k_p$  exist for disks oscillating in thickness and radial mode.

After determining the individual components of the equivalent circuit, the mechanical quality factor  $Q_m$  of the free disk can be calculated as

$$Q_m = \frac{1}{R_s} \sqrt{\frac{L_s}{C_s}}$$

Note that if the ultrasonic sensor disk is integrated into a module, the disk can no longer resonate freely. The operating frequency, quality factor and other properties of the module will be determined by the entire system that consists of the piezo disk, the membrane and surrounding materials. The controller and excitation signal should be chosen accordingly.

# Ultrasonic Sensor Disks

## Design guide for ultrasonic sensor disks

### General considerations

#### Beam directivity

Due to the short wavelength in comparison to the area of an ultrasonic sensor disk (or speaker), ultrasound can be emitted in a very directed beam.

In general, the directivity depends on the ratio of the diameter of the oscillating membrane to the wavelength, where a larger membrane diameter leads to a more focused beam. Note that the sensitivity during reception has the same directivity, and a too focused beam may cause issues if the echo is reflected off an irregular object and does not reach the receiver.


Furthermore, the presence of side lobes leads to reduced power in the main beam and possible interference. The width of the main lobe (6 dB drop of sound pressure level compared to the forward direction) can be estimated using

$$\theta_{-6dB} \approx 2 * \arcsin(0.704 \frac{\lambda}{D})$$

For example, for a transducer with membrane diameter 12 mm, operating at 2 MHz in water:

$$\lambda = \frac{c}{f} = \frac{1500 \frac{m}{s}}{2 \text{ MHz}} \approx 750 \mu\text{m} \text{ and } \frac{\lambda}{D} \approx \frac{1}{16} \Rightarrow \theta_{-6dB} \approx 5^\circ$$

The following diagram shows the directivity function, calculated for different ratios of membrane diameter to wavelength:

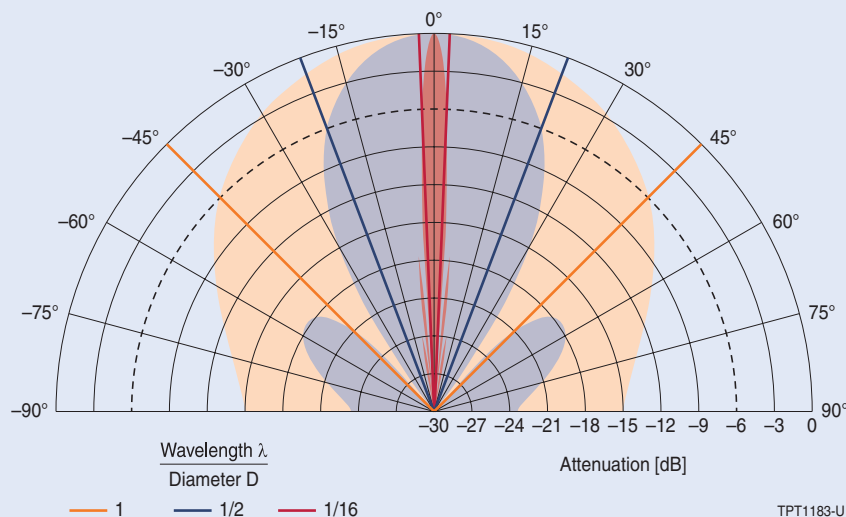

*Directivity of sound pressure level calculated for various membrane geometries (unclamped).*

In some applications, e.g. sensors mounted close to the ground, a varying directivity is desired in the horizontal versus vertical plane, which can be achieved by using an elliptical membrane shape.

# Ultrasonic Sensor Disks

## Choice of application frequency

Higher frequencies mean shorter wavelengths, and thus better precision in measurements. This leads, for example to more accurate level measurement or to detection of smaller objects. Furthermore, in pulse-echo measurements, a shorter wavelength leads to spatially shorter pulses, which allows for the measurement of shorter distances. On the other hand, higher frequencies shorten the measurement range of the sensor due to enhanced attenuation.

## Liquid transducers

### Frequency of transducer disk

Due to the low dissipation of sound in liquids, high frequency transducers (MHz range) can be used for such applications. These transducers make use of the **thickness mode** oscillation. The resonance frequency of the free disk is defined by the thickness of the disk  $th$  and the frequency constant  $N_{th}$

$$th = \frac{N_{th}}{f_{res,th}}$$

The sensitivity and the directivity of the sensor will depend on the disk diameter  $D$  as described above.

## Impedance matching

If sound is transmitted from one medium to another, a large portion may be reflected, depending on the acoustic impedance mismatch of the two materials. The acoustic impedance of a material  $Z_{mat}$  can be calculated from its density  $\rho_{mat}$  and the speed of sound  $c_{mat}$


$$Z_{mat} = \rho_{mat} \cdot c_{mat}$$

For example, the acoustic impedance of PZT ceramic is typically 32 MRayl, while the acoustic impedance of water is approximately 1.48 MRayl.

The reflection coefficient for the sound pressure of a wave travelling from medium 1 into medium 2 is given by

$$\Gamma_{12} = \frac{Z_2 - Z_1}{Z_2 + Z_1}$$


To achieve the best possible signal transfer, impedance matching layers can be used, ideally with a thickness corresponding to  $\lambda/4$  and acoustic impedance  $Z_M = \sqrt{Z_1 Z_2}$ . Impedance mismatch should be considered for all material interfaces, and materials should be chosen accordingly.

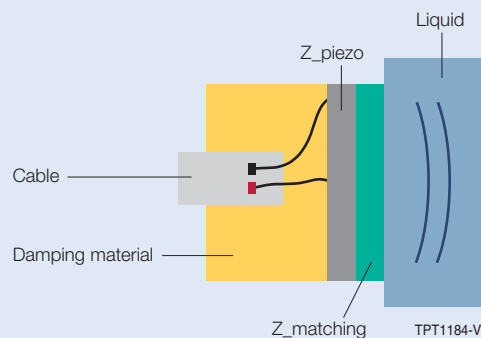

# Ultrasonic Sensor Disks

## Air transducers

Due to the frequency dependent absorption of sound in air, the frequency chosen for air ultrasound applications must be much lower than in liquids.

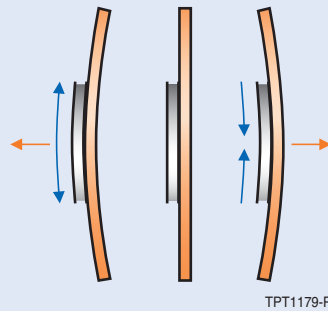

*Membrane bending using radial mode oscillation of piezo disk.*

Lower frequency ultrasonic transducers (e.g. air transducers) typically make use of a piezo disk that oscillates in **radial mode** and is attached to a membrane. The radial oscillation of the disk then is transformed into a bending motion of the membrane.



The resonance frequency of a free piezo disk oscillating in radial mode depends on the disk diameter  $D$  and can be calculated using the material specific radial frequency constant  $N_{\text{rad}}$  from

$$f_{\text{res,rad}} = \frac{N_{\text{rad}}}{D}$$

The characteristics of the transducer module, i.e. operation frequency, Q factor, range, directivity and sensitivity, are determined by the design of the entire module, for example by the thickness and diameter of the membrane and the choice of membrane and absorber materials.

## Metallization options

TDK offers both screen printed and sputtered metallization, depending on the desired electrical connection (e.g. bonding or soldering). Metallization wrap around is available, allowing connection of both electrodes to one side of the disk. In general, a possible influence of the wiring on the acoustic properties has to be taken into account.

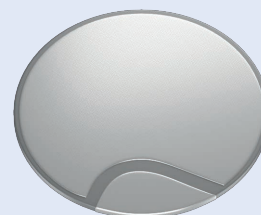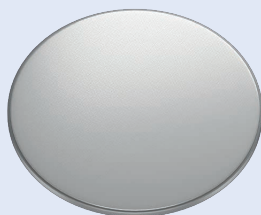


# Ultrasonic Sensor Disks

## Application examples

Ultrasonic sensor disks can be used for following applications:

### Automotive

- Ultrasonic park assist systems
- Blind spot assist systems
- Level sensing for fuel or selective catalytic reduction (SCR) tanks
- Interior monitoring and anti-theft systems

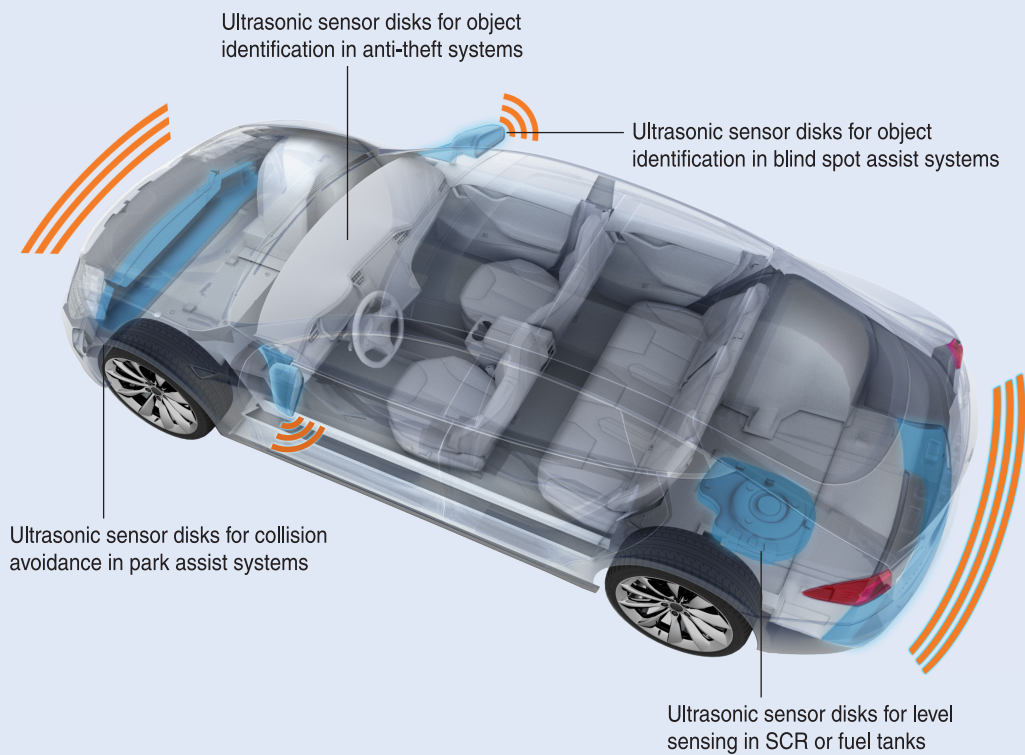



# Ultrasonic Sensor Disks

## Application examples


### Industry

- Flow meters for fluids or gases
- Level sensing for fluids or bulk materials
- Collision avoidance systems
- Concentration measurement systems

### Ultrasonic sensor disks for collision avoidance systems in autonomous industrial transport robots



### Ultrasonic sensor disks for flow metering systems in gas or fluid tubes

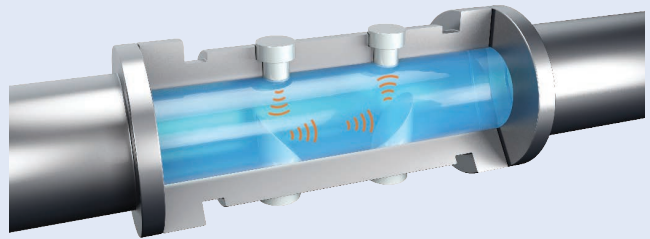

### Ultrasonic sensor disks for level sensing systems for fluids or bulk materials in silos



# Ultrasonic Sensor Disks

Product range			
Typical material parameters for ultrasonic sensor applications			
Classification (DOD-STD-1376A)	Navy II		
Classification (EN 50324-1)	200		
Dielectric constant (open)	$\epsilon_{33,r}^T$	1800	
Dielectric loss	$\tan \delta$	20	$10^{-3}$
Curie temperature	$T_C$	340	°C
Density	$\rho$	7800	kg/m <sup>3</sup>
Piezoelectric constant	$d_{33}$	420	pC/N
Frequency constant	$N_{th}$	2040	Hz • m
	$N_p$	1950	Hz • m
Electromechanical coupling factor	$k_p$	0.65	
	$k_t$	0.49	
Mechanical quality factor	$Q_m$	90	
Elastic compliance	$s_{33}^E$	19.6	$10^{-12}$ m <sup>2</sup> /N

For further applications or information about handling, mounting and operations, please check our data sheet or contact our sales team and let us know your requirements.

- Frequency
- Diameter
- Wrap-around
- Application
- Gluing, bonding or soldering

# Get in Contact

## Europe

### Austria

TDK Austria GesmbH  
T +43 1 25 63 630 56 39  
F +43 1 25 63 630 56 44  
sales.austria@eu.tdk.com

### Bosnia and Herzegovina, Bulgaria, Croatia, Greece, Macedonia, Montenegro, Serbia, Slovenia

TDK Austria GesmbH  
T +43 1 25 63 630 56 34  
F +43 1 25 63 630 56 44  
sales.southeasteurope@eu.tdk.com

### Czech Republic

TDK Czech s.r.o.  
T +420 2 33 03 22 81  
F +420 2 33 03 22 89  
sales.czech@eu.tdk.com

### Finland, Estonia

TDK Nordic OY  
T +358 10 34 90 108  
sales.nordic@eu.tdk.com

### France, Belgium, Luxembourg, Malta

TDK Electronics France SAS  
T +33 1 49 46 67 89  
F +33 1 49 46 67 67  
sales.france@eu.tdk.com

### Germany, Liechtenstein, Netherlands, Switzerland

TDK Europe GmbH  
T (D) 0180 500 33 48  
(0.14 Euro/min.)  
(NL) +31 70 33 10 611  
(CH) +49 89 54020 2691  
F +49 89 54020 2913  
sales.germany@eu.tdk.com

### Hungary

TDK Electronics Hungary Ltd.  
T +36 1 436 07 20  
F +36 1 436 07 21  
sales.hungary@eu.tdk.com

### Italy

TDK Italy S.r.l.  
T +39 02 50 99 54 25  
F +39 02 50 99 54 55  
sales.italy@eu.tdk.com

### Poland, Latvia, Lithuania

TDK Polska Sp. z o.o.  
T +48 22 24 60 409  
F +48 22 24 60 400  
sales.poland@eu.tdk.com

### Portugal

TDK Electronics Spain S.L.U.  
T +34 93 480 42 92  
+34 93 480 42 68  
F +34 93 480 42 31  
sales.iberia@eu.tdk.com

### Romania

TDK Austria GesmbH  
T +43 1 25 63 630 56 34  
F +43 1 25 63 630 56 44  
sales.romania@eu.tdk.com

### Russia, Belarus, Kazakhstan, Moldavia, Ukraine

TDK CIS LLC  
T +7 495 663 21 00  
+7 495 663 21 22  
sales.cis@eu.tdk.com

### Slovakia

TDK Austria GesmbH  
T +43 1 25 63 630 56 34  
F +43 1 25 63 630 56 44  
sales.slovakia@eu.tdk.com

### Spain

TDK Electronics Spain S.L.U.  
T +34 93 480 42 92  
+34 93 480 43 33  
F +34 91 514 70 14  
sales.iberia@eu.tdk.com

### Sweden, Iceland, Denmark, Norway

TDK Nordic AB  
T +46 8 4 77 27 00  
F +46 8 4 77 27 01  
sales.nordic@eu.tdk.com

### Turkey

TDK Europe GmbH  
T +90 216 5 69 81 01  
F +90 216 4 64 07 56  
sales.turkey@eu.tdk.com

### United Kingdom, Ireland

TDK UK Limited  
T +44 13 44 38 15 10  
F +44 13 44 38 15 12  
sales.uk@eu.tdk.com

## Asia

### Afghanistan, Iran, Iraq, Jordan, Lebanon, Pakistan, Syria

TDK Europe GmbH  
T +90 216 5 69 81 01  
F +90 216 4 64 07 56  
sales.turkey@eu.tdk.com

### China

TDK (Shanghai) Electronics Ltd.  
T +86 21 22 19 15 00  
F +86 21 22 19 15 99  
sales.cn@tdk-electronics.tdk.com

### Hong Kong

TDK Electronics Hong Kong  
Limited  
T +852 36 69 82 00  
F +852 36 69 82 56  
sales.cn@tdk-electronics.tdk.com

### India, Bahrain, Bangladesh, Kuwait, Nepal, Oman, Qatar, Saudi Arabia, Sri Lanka, United Arab Emirates

TDK India Private Limited  
T +91 120 45 05 801  
F +91 120 45 05 818  
sales.in@tdk-electronics.tdk.com

### Israel

TDK Sales Representative  
T +972 73 2676 317  
sales.israel@eu.tdk.com

## Japan

TDK Corporation  
T +81 3 67 78 10 00  
inquiry@jp.tdk.com

## Korea

TDK Electronics Korea  
Corporation  
T +82 2 21 56 68 18  
F +82 2 21 56 68 98  
sales.kr@tdk-electronics.tdk.com

## Malaysia

TDK Electronics (Malaysia) Sdn.  
Bhd.  
T +60 6 797 88 27  
F +60 6 797 88 24  
sales.asean@tdk-electronics.tdk.com

## Philippines

c/o TDK Electronics Philippines  
Corporation  
T +63 49 541 31 41 66 30  
+63 49 541 31 41 66 31  
F +63 49 541 31 40  
sales.asean@tdk-electronics.tdk.com

## Singapore, Indonesia, Thailand, Vietnam

TDK COMPONENTS PTE. LTD.  
T +65 65 97 06 28  
F +65 65 97 06 07  
sales.asean@tdk-electronics.tdk.com

## Taiwan

TDK Components Taiwan Co.,  
Ltd.  
T +886 2 26 55 76 76  
F +886 2 27 82 03 89  
sales.tw@tdk-electronics.tdk.com

## Americas

### USA, Canada, Mexico

TDK Electronics Inc.  
T +1 732 9 06 43 00  
F +1 732 9 06 43 95  
sales.usa@tdk-electronics.tdk.com

### South America

TDK Electronics do Brasil Ltda.  
T +55 11 32 89 95 99 Ext. 6851  
F +55 11 32 89 99 40  
sales.br@tdk-electronics.tdk.com

## Australia

### Australia, New Zealand

TDK Sales Representative  
T +61 3 95 66 72 17  
F +61 3 95 66 72 99  
sales.au@tdk-electronics.tdk.com

## Africa

### Egypt

TDK Europe GmbH  
T +90 216 5 69 81 01  
F +90 216 4 64 07 56  
sales.turkey@eu.tdk.com

### Morocco, Tunisia

TDK Electronics France SAS  
T +33 1 49 46 67 89  
F +33 1 49 46 67 67  
sales.france@eu.tdk.com

**Important information:** Some parts of this publication contain statements about the suitability of our products for certain areas of application. These statements are based on our knowledge of typical requirements that are often placed on our products. We expressly point out that these statements cannot be regarded as binding statements about the suitability of our products for a particular customer application. It is incumbent on the customer to check and decide whether a product is suitable for use in a particular application. This publication is only a brief product survey which may be changed from time to time. Our products are described in detail in our data sheets. The *Important notes* ([www.tdk-electronics.tdk.com/ImportantNotes](http://www.tdk-electronics.tdk.com/ImportantNotes)) and the product-specific *Cautions and warnings* must be observed. All relevant information is available through our sales offices.